



Table of Contents

Page

1.0	Introduction	3
2.0	Specifications	3
3.0	Installing the batteries	4
4.0	Battery power consumption	4
4.1	Battery lifetime	4
4.2	Battery charge indicator.....	4
5.0	Operating instructions	5
6.0	Interpreting results	6
6.1	Flow range display	6
7.0	Data collection on the PC	7
8.0	ProFLOW 6000 menu structure	9
8.1	Unit power up/power down	9
8.2	Adjust LCD character contrast.....	9
8.3	USB activation	10
8.4	Adjust LCD image backlight	10
8.5	Show battery charge indicator	11
8.6	Firmware version information.....	11
8.7	Adjust auto shutoff duration.....	12
9.0	Troubleshooting	13
10.0	Product back label legend.....	14
11.0	Volumetric vs. mass flow measurements	15
12.0	Bubble flowmeters	15
13.0	Product case specifications	16
14.0	Calibration and service	16