

8.0	Cobra L/S Setup Menus .....	17
8.1	Configuration Menu .....	17
8.2	Maintenance Menu .....	18
8.3	Diagnostics Menu .....	18
8.3.1	Relay Output Testing .....	18
8.3.2	Input Signal Test .....	18
8.3.3	Motor Delay .....	18
8.3.4	Motor Speeds .....	19
9.0	Remote I/O Cable Connections .....	20
10.0	Remote Control (RS232 Serial link) .....	20
10.1	Data Format .....	21
10.2	Command Summary from Host to Cobra .....	21
10.3	Cobra L/S Command Details .....	22
10.4	Programming System Parameters .....	23
10.5	System Errors .....	24
10.6	Error Codes .....	24
11.0	Installation of Cables and Mounting Hardware .....	24
11.1	Installation of the Cobra L/S to Gow-Mac 600 GC .....	25
11.2	Installation of the Cobra L/S to HP 5890 GC .....	26
11.3	Installation of the Cobra L/S to HP 6890 GC .....	27
Appendix: Syringe Operating Drawings .....		29