

Table of Contents

Introduction	1
Description	1
Getting Started	
Mounting.....	1
Power Connector Function	1
Basic Operation of the Manual Remote.....	2
Using the Manual Remote to Configure the Actuator	3
Accessing the Configuration Mode	3
Button Functions	3
Examples	3
Menu Tree	4
Basic Control Functions with the Standard Interface.....	5
Two Positions Modes	5
Multiposition Mode.....	5
Step Command	5
Home Command	5
Optional Serial Interface.....	6
Establishing Serial Control	6
Using the Device ID Feature	7
Setting the Operation Mode	7
Mode 1:Two Position With Stops.....	7
Mode 2:Two Position Without Stops.....	8
Mode 3: Multiposition	8
RS-485 Option	9
Setting the Serial Port Configuration Switch.....	9
USB Option	9
Serial Communication Protocol	9
Serial Commands	10
Command Reference	11
Optional BCD Interface	16
Hardware Input/Output Protocols	16
Digital Input Protocols	
Binary Coded Decimal (BCD) Input Mode	16
Parallel Input Mode.....	16
Binary Input Mode	16
Additional Digital Input and Output Signals.....	17
Using the Offset Feature.....	19
With BCD Control	19
With Serial Control	20
Appendix 1: Installing USB Drivers.....	21
Windows XP	21
Warranty	23