

# Table of Contents

---

Introduction	1
Description .....	1
Getting Started	
Mounting.....	1
Power Connector Function .....	1
Basic Operation of the Manual Remote.....	2
Using the Manual Remote to Configure the Actuator .....	3
Accessing the Configuration Mode .....	3
Button Functions .....	3
Examples .....	3
Menu Tree .....	4
Basic Control Functions with the Standard Interface.....	5
Two Positions Modes .....	5
Multiposition Mode.....	5
Step Command .....	5
Home Command .....	5
Optional Serial Interface.....	6
Establishing Serial Control .....	6
Using the Device ID Feature .....	7
Setting the Operation Mode .....	7
Mode 1:Two Position With Stops.....	7
Mode 2:Two Position Without Stops.....	8
Mode 3: Multiposition .....	8
RS-485 Option .....	9
Setting the Serial Port Configuration Switch.....	9
USB Option .....	9
Serial Communication Protocol .....	9
Serial Commands .....	10
Command Reference .....	11
Optional BCD Interface .....	16
Hardware Input/Output Protocols .....	16
Digital Input Protocols	
Binary Coded Decimal (BCD) Input Mode .....	16
Parallel Input Mode.....	16
Binary Input Mode .....	16
Additional Digital Input and Output Signals.....	17
Using the Offset Feature.....	19
With BCD Control .....	19
With Serial Control .....	20
Appendix 1: Installing USB Drivers.....	21
Windows XP .....	21
Warranty .....	23