





25325

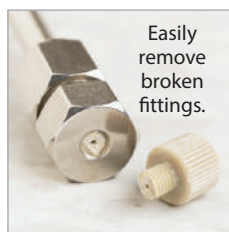

Easily
remove
broken
fittings.

PEEK Fitting Extractor

Drill into the broken fitting, then screw the extractor into the fitting and remove it easily. Eliminates the need for heat or other techniques that could damage your column.

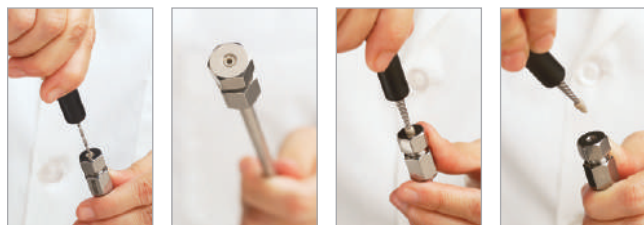

Description	qty.	cat.#
PEEK Fitting Extractor	ea.	25325



25321

ValvTool Wrench

The ValvTool is a time-saving device that provides easy access to many hard-to-reach Rheodyne® or Valco® valves. For 1/4" nuts.

Description	qty.	cat.#
ValvTool Wrench	ea.	25321

Use the flat
side of the
piston seal
insertion
tool to seat a
Waters face
seal.



LC Piston Seal Insertion Tool

Simplify pump maintenance: use one end to remove your old seal, then simply slip your new seal on the other end and push it flush into position. The tool cannot mar the surrounding metal surface of the pump housing.



21356

Remove a seal



Seat a seal



Description	qty.	cat.#
LC Piston Seal Insertion Tool	ea.	21356

Raptor™

LC Columns



Experience
Selectivity Accelerated

See pages 155–159 or visit www.restek.com/raptor

Raptor™ EXP® Guard Columns also available.

RESTEK
2015/16

RESTEK
Distributor

CHROMALYTIC

in AUSTRALIA : Contact +81 3 9762 2034

SHOPPE

www.chromalytic.net.au

e-mail : sales @ chromtech.net.au