



## Operation of the Cobra Autosampler on the 8610V gas chromatograph

Slide the keypad into the track.

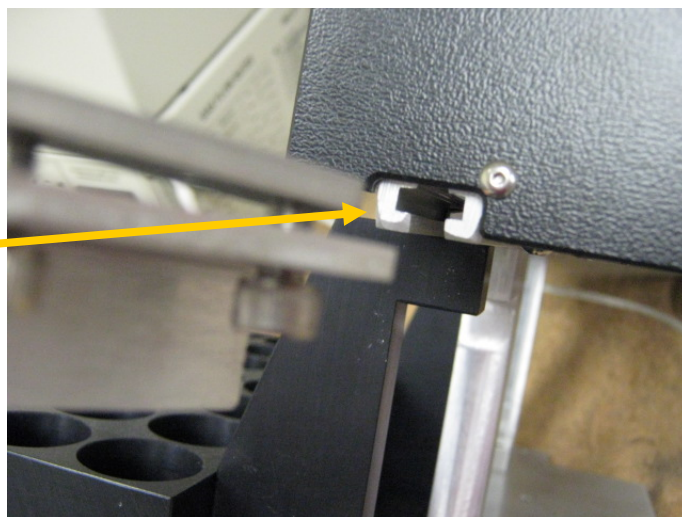

Use the 5/32" hex wrench to tighten the clamping basket.

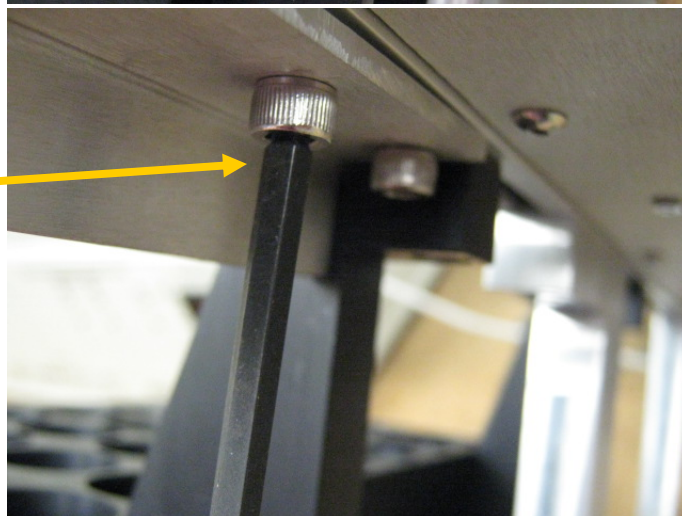

If they are not already mounted, attached the four standoffs to the top plate of the 8610V GC

